

# UNIVERSAL TOWING MIRROR

## INSTALLATION INSTRUCTIONS



UTM Part #11960

Tow-N-Go Solutions, Inc.  
www.towngosolutions.com



FIG. 1



FIG. 2

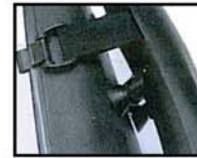


FIG. 3

### Installation Instructions

- 1) The Tow-N-Go Solutions Universal Towing Mirror (UTM) can be symmetrically fit to your vehicle, so there is no left or right hand version.
- 2) For best results, please clean the outer surface of your vehicles mirror housing before installation. The non-marring feet of the UTM are designed not to harm the finish but the UTM will stay tight and in place much better on a clean surface.
- 3) Install the round "pads" onto the rubber feet by peeling the backing off and placing the sticky side toward the rubber foot. The pad will adhere firmly after several minutes of pressure while the UTM is installed and clamped into place.
- 4) Install the included "jam nuts". The jam nuts are used for stabilizing the adjustable feet and should be installed by unscrewing the adjustable feet and screwing the jam nut onto the threaded portion. The small end of the jam nut must be facing the UTM and the larger Knurled end facing the rubber feet. After positioning the adjustable feet to fit your mirror housing, the jam nuts should be tightened down onto the UTM housing.
- 5) Next, pull the adjusting knob (see Fig. 1) and lengthen the straps and hooks equally on both sides, then push the knob in to the "tighten" position.
- 6) Hold the UTM up to the front of your mirror housing and adjust the two outer "feet" to fit the angle of your mirror housing by rotating the feet until the UTM is positioned with the mirror perpendicular to the ground.
- 7) The "jam nuts" should then be tightened by hand until they stop on the mirror housing, thus locking the adjustable feet into place (see Fig. 2).
- 8) Engage the "hooks" around your vehicles mirror housing (see Fig. 3), tighten the adjuster knob to take up the slack and hand tighten for a snug fit.
- 9) A slight wiggling of the UTM with one hand while tightening the adjuster knob will help to remove any slack in the system and ensure a snug fit.

- 10) Finally, the mirror should be adjusted while sitting in your normal driving position for the best view. This is done by manually pushing on the mirror glass (by hand) to tilt to the desired angle. The spring loaded mirror mount will hold this position once in place.
- 11) Removal is easily accomplished by pulling out the adjuster knob and rotating the knob counter-clockwise to relieve tension on the hooks.
- 12) Don't forget to re-check the tightness of your UTM periodically (daily) to ensure safe operation. Enclosed in your UTM package are two different hooks that should fit all types of mirror housings. In the event that you have a mirror housing that is extraordinarily thick, a larger metal hook is enclosed.

### Cleaning and Maintenance

- 1) Cleaning, when necessary, may be accomplished by hand with water based soaps and light rubbing. The mirror glass portion can be cleaned with any commercially available glass cleaning product.
- 2) Do not put your vehicle, with the UTM attached, through an automatic carwash as this could damage both the UTM and your vehicle mirror.
- 3) Do not apply wax to your UTM.
- 4) There is no routine maintenance required for your UTM and it should last many years with just occasional cleaning needed.
- 5) When not in use, store out of direct sunlight (as in a closed vehicle) as extreme heat exposure may damage the UTM mirror housing.

### WARRANTY

Tow-N-Go Solutions, Inc. warrants your UTM to be free from defects in material and workmanship for a period of one year from purchase. During the warranty period any UTM found to be defective will be replaced at no charge. The UTM must be returned with proof of purchase to Tow-N-Go Solutions, Inc. - Customer Service Department.

Tow-N-Go Solutions, Inc.

P.O. Box 610182  
Port Huron, Michigan 48061-0182

Toll Free: 1-888-776-6758

Email Us: [customerservice@towngosolutions.com](mailto:customerservice@towngosolutions.com)

## RÉTROVISEUR UNIVERSAL DE DÉPANNAGE DES RENSEIGNEMENT D'INSTALLER



RUD Partie #11960

Tow-N-Go Solutions, Inc.  
www.towngosolutions.com



FIG. 1



FIG. 2

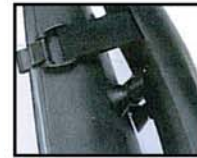


FIG. 3

### Des Renseignements D'installer

- 1) Le Rétroviseur Universel de Dépannage (RUD) de Tow-N-Go Solutions, Inc. peut s'ajuster à n'importe quel véhicule.
- 2) Notez bien: il n'y a pas de version ni gauche ni droite.
- 3) S'il vous plaît, nettoyez la surface extérieure du boîtier de rétroviseur de votre véhicule avant l'installation. Les pieds non-défigurants du RUD sont projetés de ne pas gâter le peint mais le RUD resetera ferme bien mieux sur une surface propre.
- 4) D'abord, tirez le bouton d'ajuster (de Serrer) et tournez-le vers le gauche (figure 1) et étendez les courroies et les agrafes également à tous les deux côtés. Puis rendez le bouton à la position de "serrer".
- 5) Tenez le RUD devant le boîtier de rétroviseur et ajustez les deux "Pieds" extérieurs à l'angle de votre boîtiers en tournant les pieds jusqu'à ce que le RUD se trouve perpendiculaire (vertical) à la terre.
- 6) Engagez les "crampons" autour du boîtier du rétroviseur de votre véhicule, tournez le bouton de serrer à droite pour enlever le mou et serrez-les à la main pour les assurer. (Notez bien: Une petite agitation du RUD à une main en serrant le bouton d'ajuster vous aidera à enlever du mou dans le système et à l'assurer sûrement.)
- 7) Ajustez le rétroviseur pour la meilleure vue.
- 8) N'oubliez pas de vérifier le raideur de votre RUD de temps en temps pour assurer l'opération sûre.
- 9) D'attacher le RUD se fait facilement en tirant le bouton d'ajuster et le tournant à gauche pour alléger la tension sur les agrafes.

### Le Nettoyage et le Maintien:

- 1) Le nettoyage, quand c'est nécessaire, se fait à la main avec du savon foncé sur l'eau et du frottage léger.
- 2) Le vitre du rétroviseur se fait nettoyé par des produits commerciaux pour laver les vitres.
- 3) Ne mettez pas votre véhicule avec le RUD à travers les laveurs mécaniques des voitures car cela peut endommager le RUD et aussi le rétroviseur de votre véhicule.
- 4) Ne mettez pas de cire sur votre RUD.
- 5) Il n'y a pas de maintien habituel ou obligatoire pour votre RUD et il doit durer beaucoup d'années avec du nettoyage intermittent.
- 6) Quand on ne s'en sert pas, gardez-le hors du soleil direct dans un véhicule fermé, car la chaleur extrême peut endommager le boîtier de rétroviseur.

### GARANTIE

Tow-N-Go Solutions, Inc. garantit votre RUD d'être libre de défauts de matière et d'ouvrage pour un an de la date de l'achat. Pendant cette période de garantie on remplacera Sans frais, n'importe quel RUD trouvé défectueux. On est obligé de rendre le RUD avec la preuve de l'achat à Tow-N-Go Solutions, Inc. le département de service aux clients.

**Tow-N-Go Solutions, Inc.**

P.O. Box 610182  
Port Huron, Michigan 48061-0182

Toll Free: 1-888-776-6758

Email Us: [customerservice@towngosolutions.com](mailto:customerservice@towngosolutions.com)